

## Troubleshooting process loops

### Application Note



Tracking down problems within a process loop can be a difficult challenge. However, with the right tools and their proper application, most problems are resolved in short order. This article will demonstrate some practical applications of process meters, loop calibrators, and digital multimeters (DMMs) to troubleshoot the cause of process loop problems.

#### Loop calibrators

Loop calibrators, such as the Fluke 705, 715, 707 and the intrinsically safe 707Ex have the ability to replace the power source in a current loop. With the calibrator in control of the current, you can accurately set the current between 4 and 20 mA, controlling the loop and the device connected to it. This makes it possible to test valve positioners, mechanical position indicators, and flow indicators. You can check a valve's closed and open positions by accurately setting the current in the loop through the calibrator for each of the positions, and then visually check the position of the valve at each setting. The ability to control devices in this way makes the testing and troubleshooting process much simpler.

For testing devices requiring a voltage input, like a signal conditioner, we can use the source mode of a calibrator in conjunction with a precision resistor to generate accurate voltages.

Simply taking a precision resistor and placing it across the output leads of a loop calibrator creates a voltage across the resistor that is directly controlled by the source current from the calibrator. For example, placing a 250  $\Omega$  resistor across the source output jacks and driving it with a 4 to 20 mA current will produce 1 to 5 V across the resistor. Place this voltage on the input of a signal conditioner and we have created a test system to set linearity as well as the zero and span points of the conditioner. With a DMM or ProcessMeter™ like the Fluke 789, you can measure the output of the signal conditioner and ensure the proper levels are coming out of the conditioner with a corresponding input voltage.

#### ProcessMeter™

The Fluke 789 is a loop calibrator and professional true-rms DMM in one package. Although not as accurate as other Fluke loop calibrators, the 789 works well as a current source in most troubleshooting situations. You can still control devices on a current loop to see if they are functioning, and set them to various levels to aid in locating problems. The DMM measurement capabilities within the 789 make it a valuable tool in troubleshooting process loops. All the basic DMM measurement functions like volts ac and dc, current ac and dc, resistance, and frequency can be utilized at different stages of the troubleshooting process.

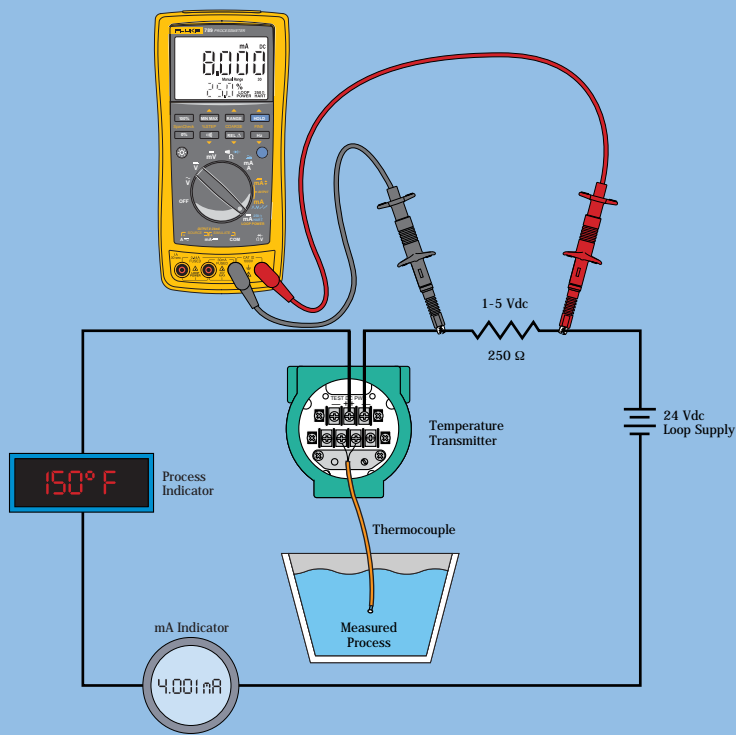


Figure 1.

Another feature of the 789 that comes in handy is the min/max function, which can be used to determine the range of values a current loop experiences over a period of time. If the current loop has a dropping resistor across which we can make a voltage measurement, place the 789 in volts dc and connect the leads across the dropping resistor (Figure 1). This will give you a voltage reading that will vary in proportion to loop current. If a dropping resistor is not available, you can open the current loop and use the ProcessMeter's current jacks to close the loop (Figure 2).

With the Fluke 789 in the proper function and connected to the circuit, press the mix/max button to activate the mode. The Fluke 789 will look at each measurement and test whether it is higher than the highest reading it has measured so far, or lower than the lowest measurement. If it detects a new high or low, the meter will store that value. This process continues until the meter is shut off or another function selected. While in the min/max mode, selecting the min/max button will cycle the display through the high, low, and average readings stored in the ProcessMeter.

**Digital multimeters**

Another DMM you can use in troubleshooting process loops is the Fluke 189 logging meter. The Fluke 189, besides being an extremely accurate DMM, has the capability to store time stamped measurements taken periodically, or in a series. These readings can then be used for future analysis, reference, and process documentation. Like the min/max mode of the Fluke 789, this can be helpful in looking for values on a loop that are unexpected and that occur intermittently. However, this DMM takes the min/max record method to the next level.

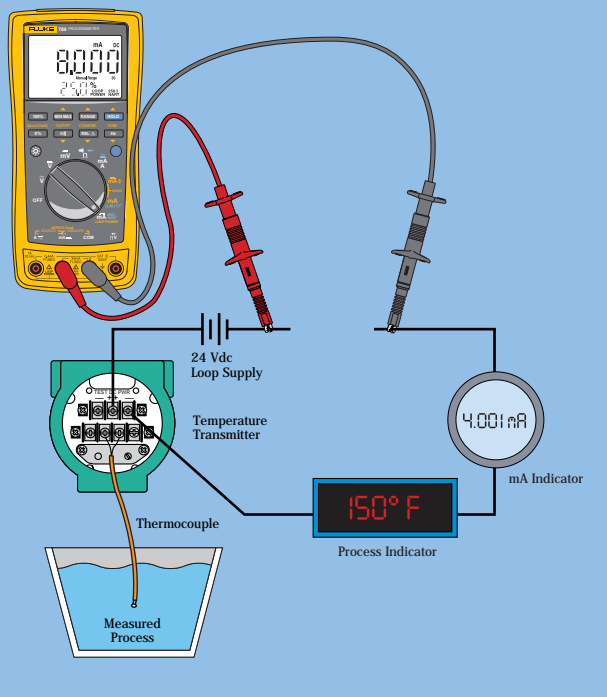


Figure 2.

### Logging

The Fluke 189 can be set to record a series of intervals instead of a single interval of high and low readings. In addition, these intervals are time stamped in real time so you can tell exactly when a min/max period took place. However, to view all the data from these logged measurements, you must have access to a PC and use software to transfer and view the data.

The Fluke 189's logging feature gathers and records high and low readings over a period of time which will be referred to simply as a period. The beginning and ending of this period can be triggered in two different ways; either by a set time period (interval logging), or by one of two events (event logging).

#### Interval logging

Through the Fluke 189's setup feature, you can set the time interval, or period that high-low data is to be collected, from 1 second to 99 minutes and 59 seconds. If, for instance, you set the logging interval to five minutes, from the instant you start the logging process, the highest and lowest readings over the next five minutes are recorded. The average of all readings taken during that five-minute period is calculated and recorded as well. At the end of that period, another five-minute period starts recording. This continues until the DMM has no more memory to store data or the logging process is terminated. After the logging session, data is downloaded to a PC for storage and analysis.

#### Event logging

As mentioned earlier, there are two events that control the measurement period for event logging. One is a "stable" measurement and the other is an "unstable" measurement.

A stable period will continue to be stable if the input signal does not vary more than  $\pm 4$  percent from the input signal amplitude at the beginning of a stable period. If during this time the input signal jumps or drifts outside the  $\pm 4$  percent window and is detected by the meter as

being outside the window, the meter will end that stable period and log (record) the input signal's high, low, and average values for that stable period of time.

The meter will then attempt to start another stable period. If the meter finds the input signal cannot stay within the  $\pm 4$  percent window after trying to start a new stable period, it then defines a period of time as unstable.

#### Logging a process loop

As before, we can either place the Fluke 189 across a dropping resistor placed in the current loop, or break the circuit and place the DMM's current jacks in series with the current loop, making sure to select the voltage or current function as appropriate. If we want to conduct interval logging, we use logging interval through the DMM's setup function to set the desired time interval. If we are only interested in event logging, then we simply turn off the interval logging by setting the interval to 00:00, and activate the logging session by starting the logging function.

At this point we can leave the DMM running and come back at a later time to retrieve the logged data. With interval logging, the DMM can store up to 288 periods. Of course, how long that is will depend on the interval. For instance, an interval of five minutes gives 24 hours of logging, while 15 minute intervals allows for 72 hours. Event logging capability is determined by the number of stable and unstable periods detected.

#### FlukeView® Forms

With FlukeView Forms loaded on a PC, you can transfer logging and measurement data from the DMM to the PC and display that data in a graphical as well as tabular form. This software package is ideal for documenting measurements taken by the Fluke 180 Series DMMs.

Shown in Figure 3 is the tabular presentation of a five-minute logging session on a current loop. For this session, interval logging was used and the interval period was set to ten seconds. You will see that each recorded period has a start time, duration, high value, average value, low value, a description, and a stop time. The recorded times are in real time or time-of-day, not elapsed time.

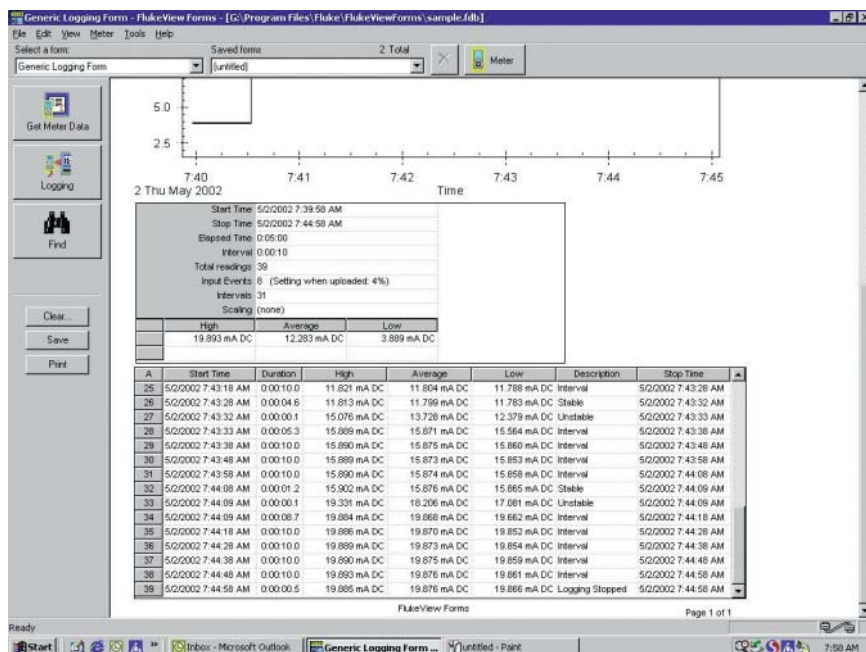


Figure 3.

FlukeView Forms creates a graph of the recorded data as well. The graph is a series of rectangles strung together with each rectangle representing a period. The top of each rectangle represents the maximum value while the bottom is the minimum value. A bar across the inside of a rectangle represents the average value. This gives us a visual approximation of the data collected by the DMM and makes it easy to spot any anomalies in the current loop measurement.

The graph in Figure 4 is set up to show just the “interval” periods. You’ll see that the value changes very little with the exception of the time period around the 2:35:58 mark. That period had a large variation occur which is not typical of a temperature measurement loop. By adding the “events” logging periods, we see that the anomaly is very short in duration. Looking at the event in the tabular form (Figure 5) shows the transition happened in a 3.1 second period.

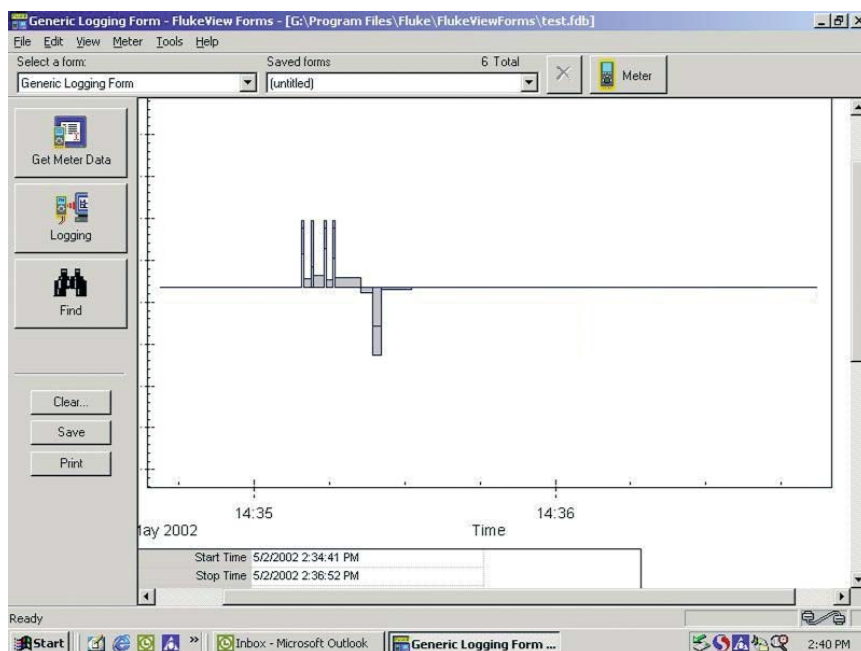


Figure 4.

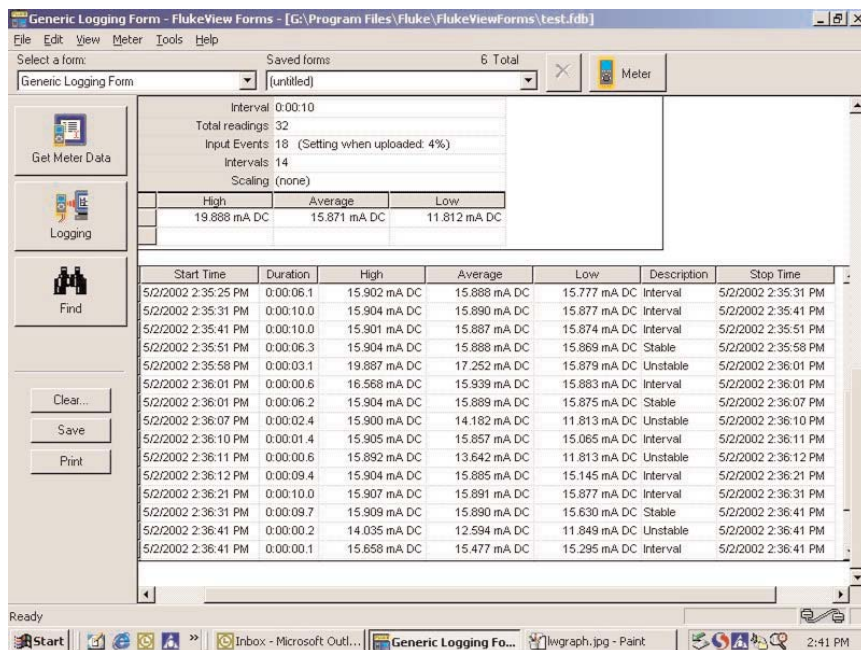


Figure 5.

## AC and DC readings

The Fluke 189 has the ability to display both the ac and dc components of a signal simultaneously. In addition, this DMM will combine the two components and display the result as a true-rms value. This gives us the capability of measuring exactly what a device on a process loop sees for a signal. This can be handy when we're looking for noise or current loop interference.

As before, you either measure across a dropping resistor or insert the meter into the current loop. Now you switch the DMM to either dc volts or dc amps as appropriate. The DMM now shows the current flowing in the loop (if measuring across dropping resistor, the voltage represents the current in the loop). Next, you press the blue function button to switch the function to ac + dc. The display of the DMM now shows two separate readings. The large, or primary, digital display indicates the dc measurement while the smaller, or secondary, display is the true-rms ac measurement riding on the dc signal.

Pressing the blue function button again swaps the two digital displays. Pressing it a third time, combines the two voltages into a true-rms value of the total signal.

The ac + dc feature of the Fluke 189 can help us track down noise or EMI signals on the current loop. As long as the ac signal stays relatively small in comparison to the dc signal, all works well. If the ac signal starts approaching .5 mA, then you may have a noise or interference problem that needs tracking down.

## Summary

As this article has demonstrated, a number of different tools can be used for troubleshooting process loops. Calibrators are not only handy for calibrating a process loop's operation, but to help identify trouble areas as well. The ProcessMeter gives us both the calibrator and DMM capabilities, while a more advanced DMM can also prove beneficial to the troubleshooting process.

**Fluke.** *Keeping your world up and running.*

### Fluke Corporation

PO Box 9090, Everett, WA USA 98206

Fluke Europe B.V.  
PO Box 1186, 5602 BD  
Eindhoven, The Netherlands

For more information call:  
In the U.S.A. (800) 443-5853 or  
Fax (425) 446-5116  
In Europe/M-East/Africa (31 40) 2 675 200 or  
Fax (31 40) 2 675 222  
In Canada (800) 36-FLUKE or  
Fax (905) 890-6866  
From other countries +1 (425) 446-5500 or  
Fax +1 (425) 446-5116  
Web access: <http://www.fluke.com>

©2003 Fluke Corporation. All rights reserved.  
Printed in U.S.A. 5/2002 1989137 A-ENG-N Rev A  
Pub-ID 10643-eng Rev. 01